


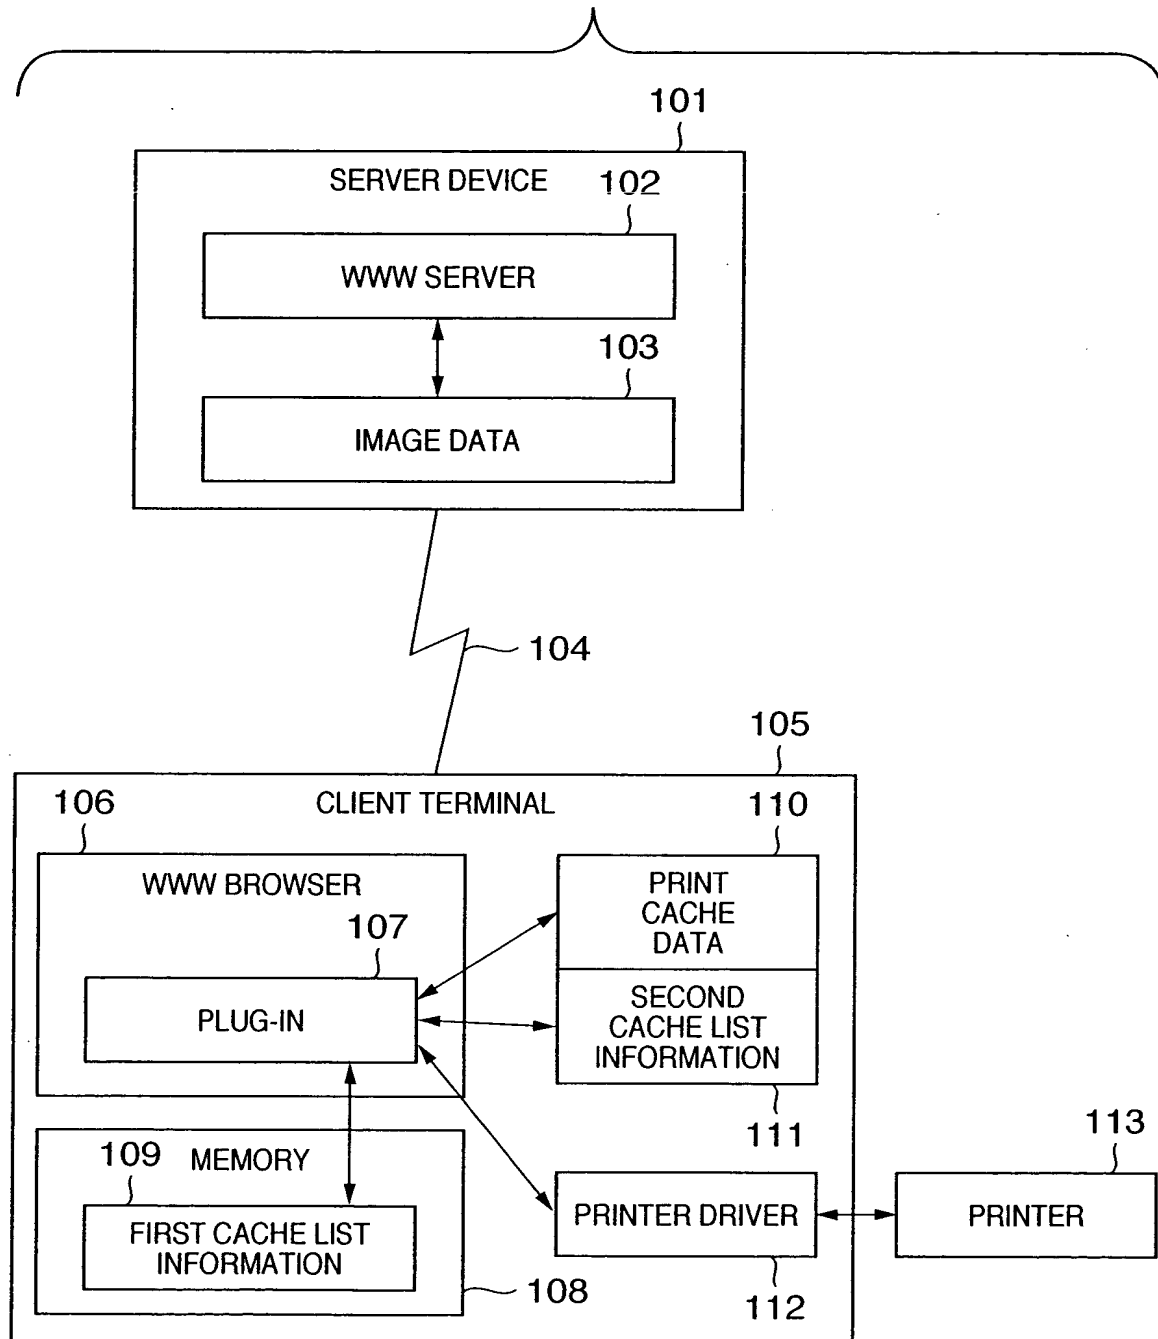
**FIG. 1**

FIG. 2

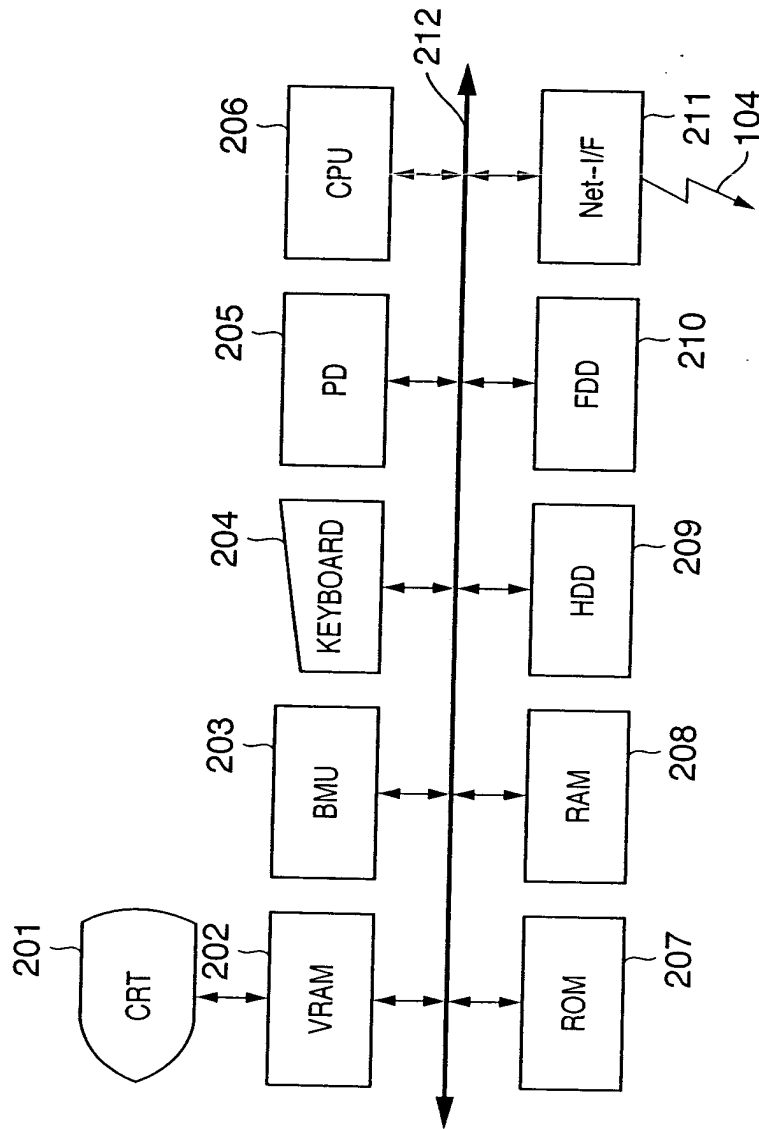

**FIG. 3**

PRINTER

PRINTER 1

▼

PAPER SIZE

L SIZE

▼

PAPER TYPE

GLOSSY PAPER

▼

LAYOUT

FRAMELESS

▼

A

306

1 SHEET

307

306

B

306

3 SHEETS

306

C

306

2 SHEETS

306

D

306

2 SHEETS

E

306

1 SHEET

F

306

2 SHEETS

308

PRINT

FIG. 4A


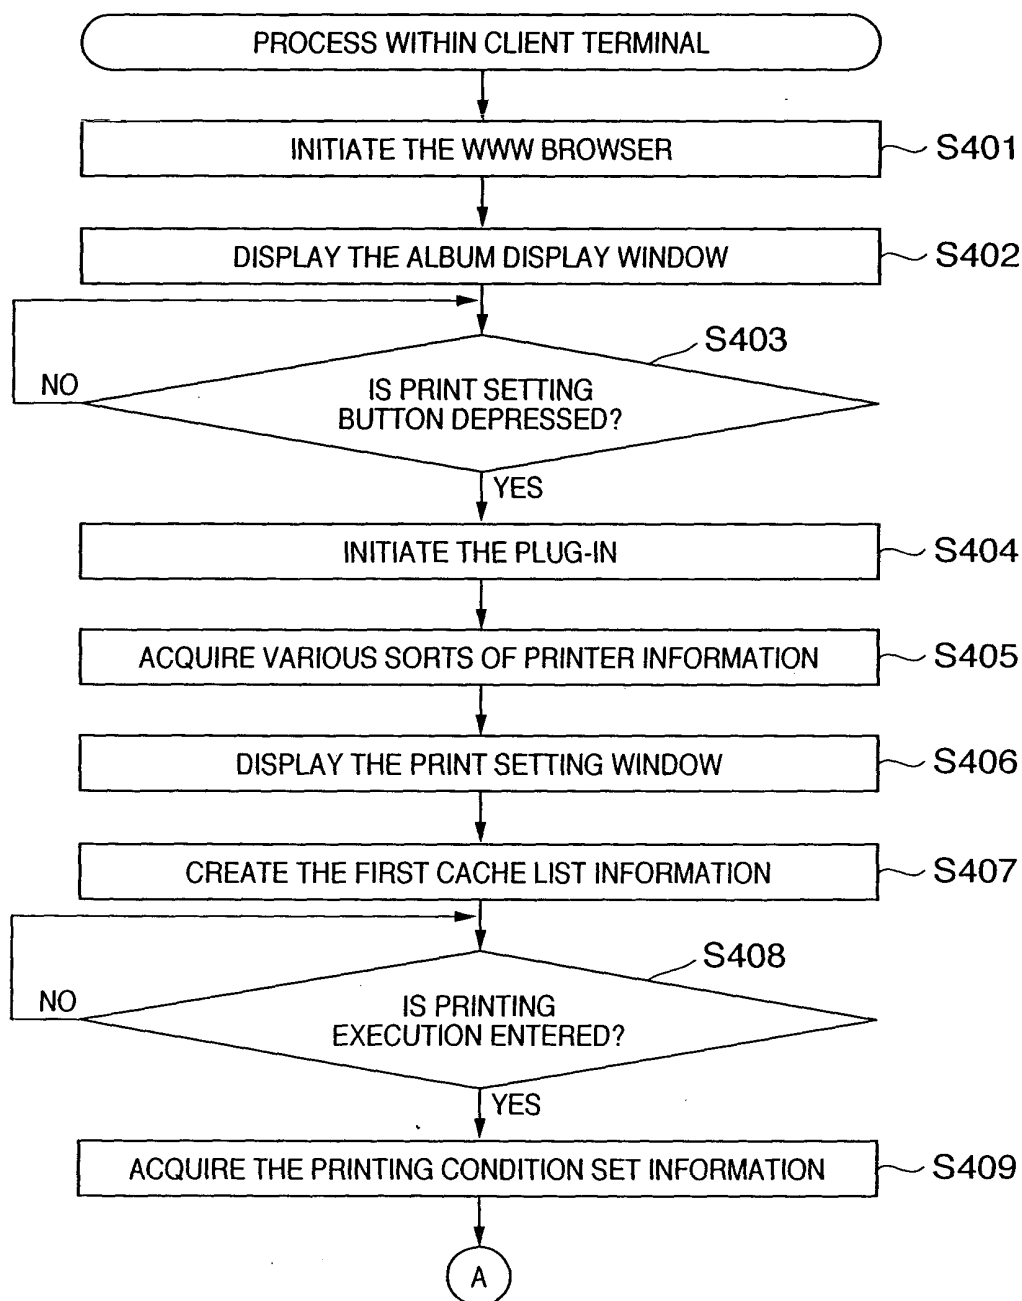


FIG. 4B

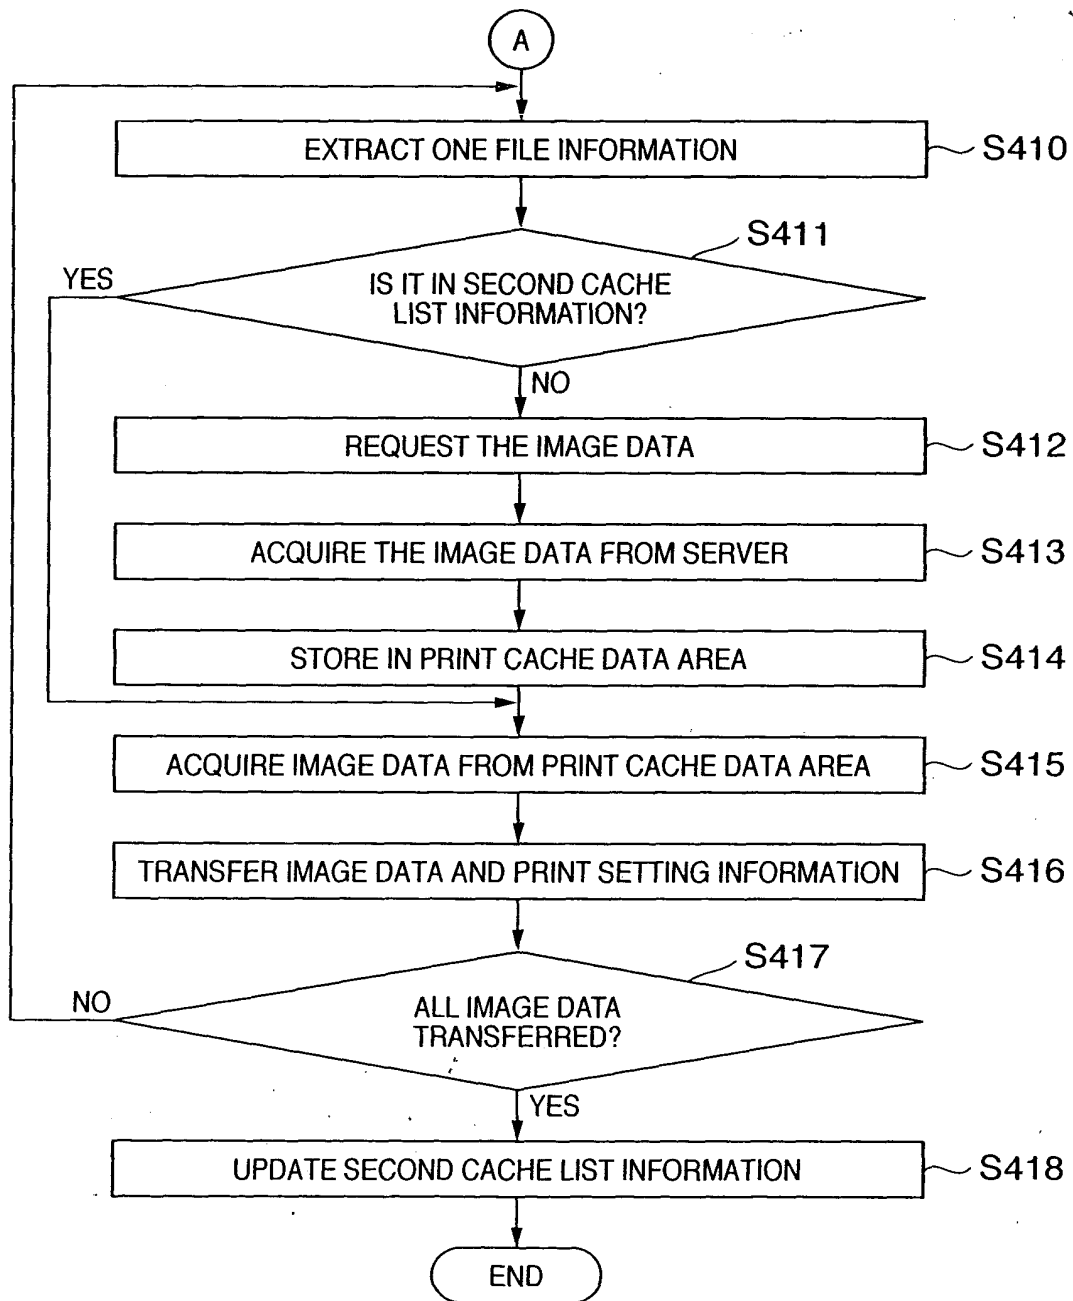


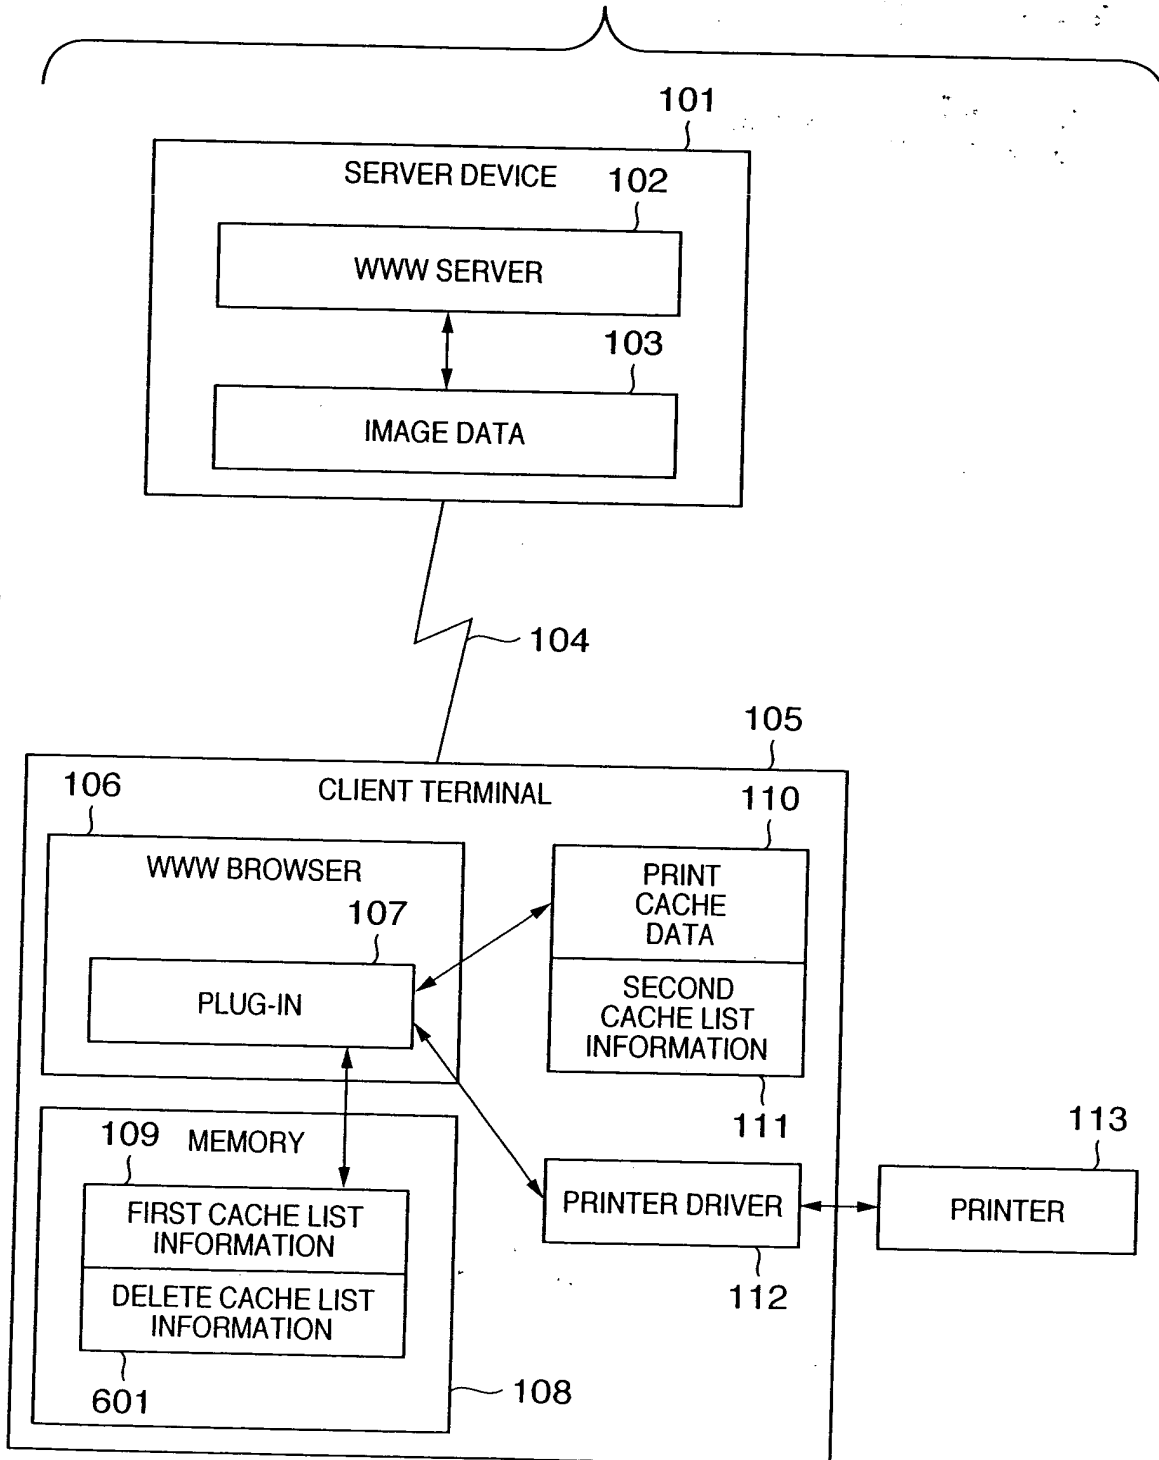
**FIG. 5**

FIG. 6


7/8

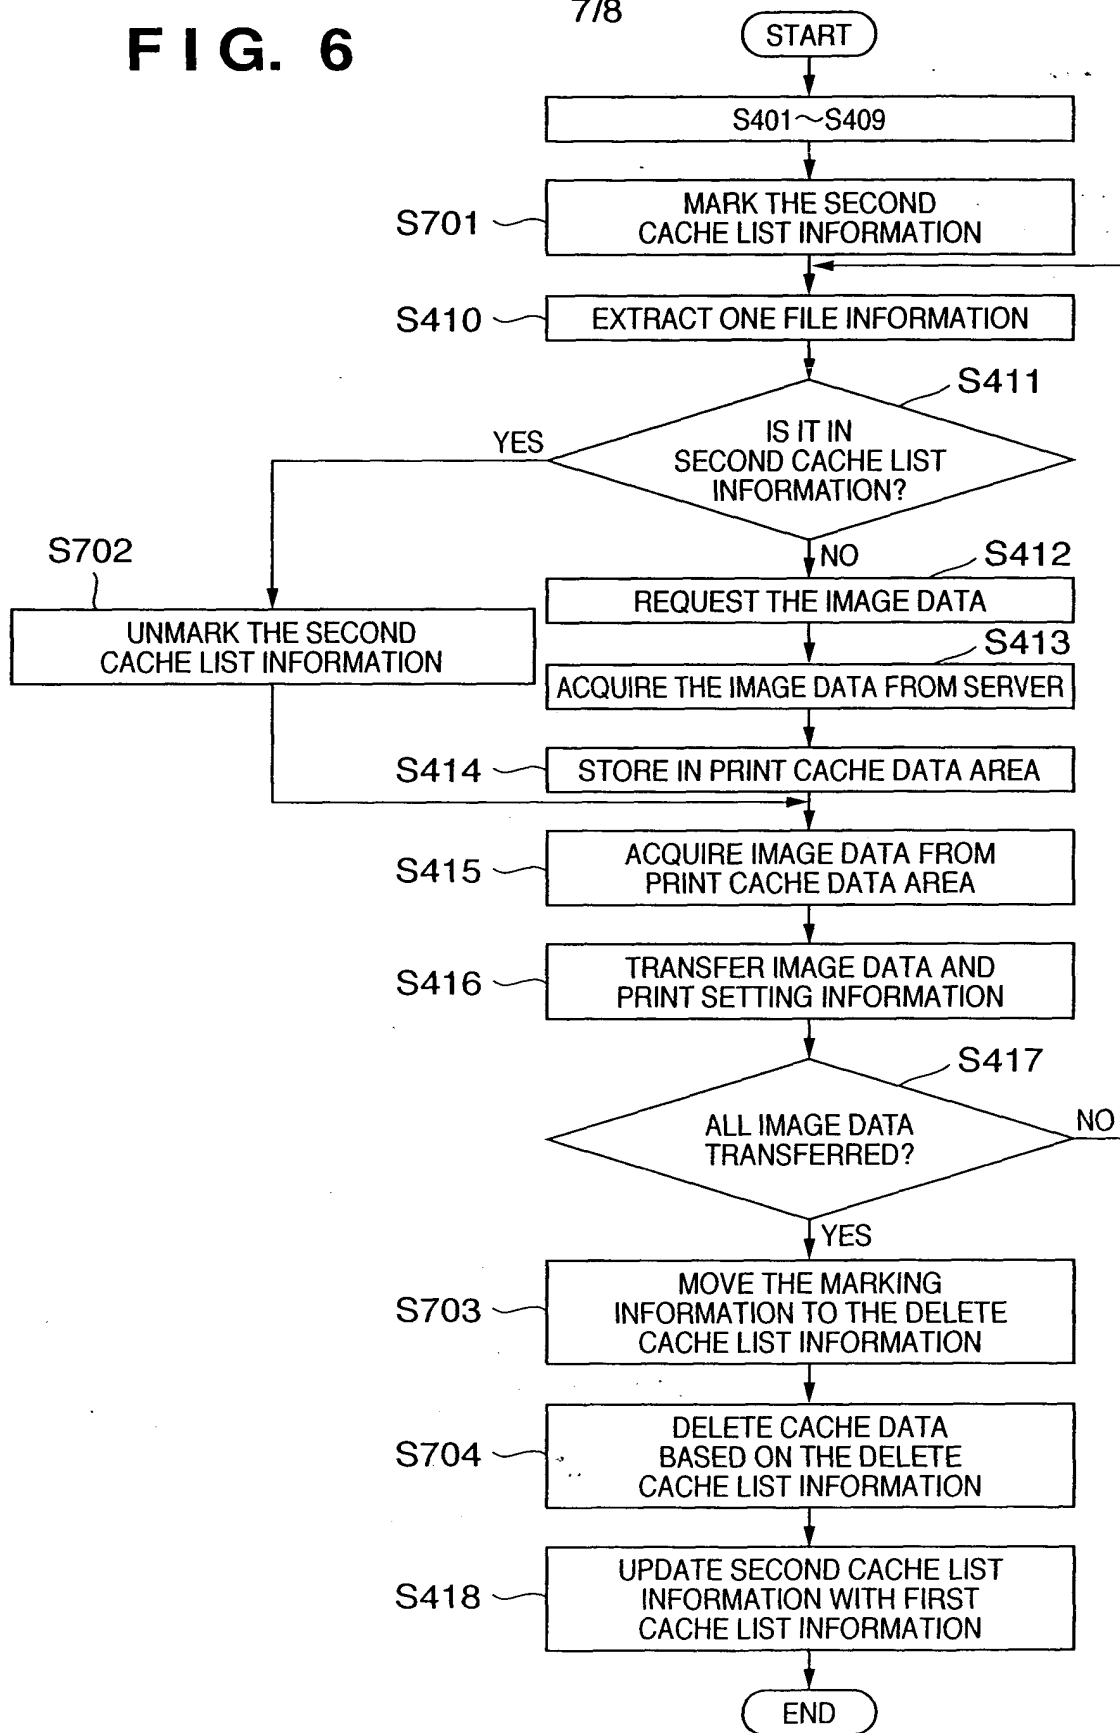



**FIG. 7**

900

PLEASE CHECK A CHECK BOX OF AN IMAGE TO BE PRINTED AND PUSH THE PRINT SETTING BUTTON.

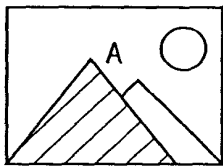☐ 901  < CAPTION ON IMAGE **A** >

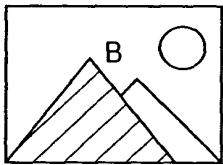☐  < CAPTION ON IMAGE **B** >

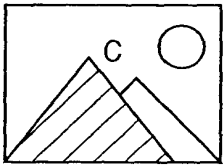☐  < CAPTION ON IMAGE **C** >

903

902 PRINT SETTING